


SERVICE

LOAD RUNNER ASSEMBLY INSTRUCTIONS

VLR 5-1/2" (LM-67000LA 90037 Bearing Assembly)

VLR 6-1/2" (395LA90329 Bearing Assembly)

Note: This spacer actually holds the outer race in place.

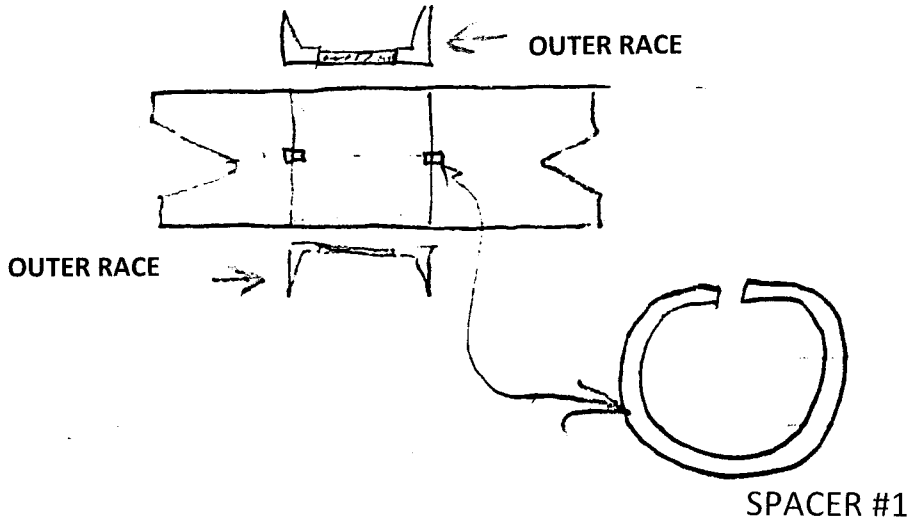

NOTE: These spacers set the preload of the tapered bearings by tying all the inner races together when the axle nut is drawn up.

